



# ■ R管 (片落ち管)

# ■ RTR管

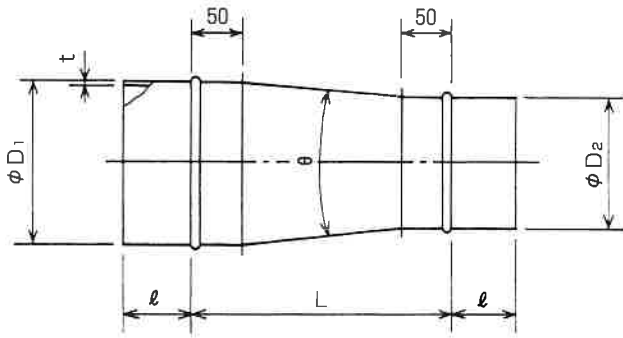

$$L = 2(D_1 - D_2) + 100$$

$$\theta \cong 28^\circ$$

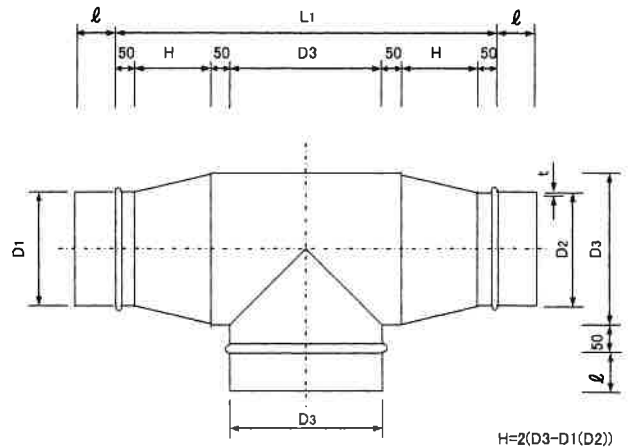

$$H=2(D_3-D_1(D_2))$$

呼び径		寸法		
$\phi D_1$	$\phi D_2$	t	L	$\ell$
100	75	0.6	150	60
125	75	0.6	200	60
	100	0.6	150	60
150	75	0.6	250	60
	100	0.6	200	60
	125	0.6	150	60
175	75	0.6	300	60
	100	0.6	250	60
	125	0.6	200	60
	150	0.6	150	60
200	100	0.6	300	60
	125	0.6	250	60
	150	0.6	200	60
	175	0.6	150	60
225	100	0.6	350	60
	125	0.6	300	60
	150	0.6	250	60
	175	0.6	200	60
	200	0.6	150	60
250	100	0.6	400	60
	125	0.6	350	60
	150	0.6	300	60
	175	0.6	250	60
	200	0.6	200	60
	225	0.6	150	60
275	100	0.6	450	60
	125	0.6	400	60
	150	0.6	350	60
	175	0.6	300	60
	200	0.6	250	60
	225	0.6	200	60
	250	0.6	150	60
300	100	0.6	500	60
	125	0.6	450	60
	150	0.6	400	60
	175	0.6	350	60
	200	0.6	300	60
	225	0.6	250	60
	250	0.6	200	60
	275	0.6	150	60

呼び径			寸法		
$D_1$	$D_2$	$D_3$	t	$L_1$	$\ell$
75	75	100	0.6	400	60
100	100	125	0.6	425	60
		150	0.6	550	60
	125	150	0.6	500	60
125	125	150	0.6	450	60
		175	0.6	575	60
	150	175	0.6	525	60
		200	0.6	650	60
150	150	175	0.6	475	60
		200	0.6	600	60
	175	200	0.6	550	60
175	175	225	0.6	675	60
		250	0.6	700	60
	200	225	0.6	525	60
		250	0.6	650	60
		275	0.6	725	60
200	200	250	0.6	600	60
		275	0.6	725	60
	225	250	0.6	550	60
		275	0.6	675	60
225	225	275	0.6	625	60
		300	0.6	750	60
	250	250	0.6	550	60
		275	0.6	675	60
		300	0.6	700	60
250	250	350	0.6	950	60
		400	0.6	1,100	60
	300	275	0.6	600	60
		350	0.6	850	60
275	275	350	0.6	800	60
		400	0.6	1,050	60
	300	350	0.6	750	60
300	300	400	0.6	1,000	60
		450	0.8	1,150	60
	350	350	0.6	650	60
325	325	0.6	650	60	
	350	0.6	850	60	